

# RUBBER

## > CLEANING & MAINTENANCE

### PREVENTIVE CARE

- ▶ Approximately 80% of the dirt and soiling that has to be cleaned off a floor has been trafficked in from outside the building. More than 90% of that soiling can be avoided by the use of an effective entrance matting system. When less dirt is trafficked through the entrance there will be a reduction in maintenance requirements.
- ▶ Regular cleaning is more cost-effective and hygienic than occasional heavy-duty cleaning.
- ▶ Wipe up any grease and oil spills immediately and treat stains as soon as they are observed.
- ▶ Black rubber wheels and rubber furniture feet can discolour the floor covering. Hard plastic is preferred.
- ▶ Always follow the manufacturer's dosage instructions regarding the use of cleaning chemicals.

### POST-INSTALLATION SITE CLEAN

- ▶ Floor maintenance begins immediately after the completion of installation. The initial step is to remove any loose dirt or debris using a dry mop, broom or vacuum. Sand, construction debris and sharp-edged objects may result in irreparable damage being inflicted to the new floor.
- ▶ Remove any visible adhesive residue using a damp cloth. Once the adhesive has cured it will be difficult to remove.
- ▶ If other trades are working in the building after the installation of the flooring, the floor must be protected from subsequent damage by the use of thick paper, cardboard or hardboard.
- ▶ No wet maintenance must take place until 72 hours (3 days) have elapsed from the time of installation. This is to ensure that the adhesive has sufficient time to cure properly and develop full bond strength.


## INITIAL CLEANING

### STEP 1




Dust mop or vacuum the floor to remove loose soil and dust.

### STEP 2

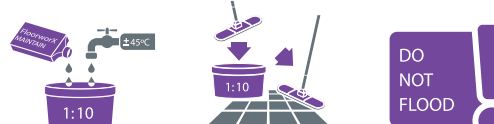

Scrub the floor using a solution of FloorworX Maintain diluted 1:10 with clean water.

### STEP 2 continued.

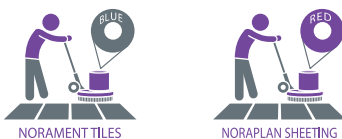

With a rotary machine fitted with a blue pad for Norament tiles and a red pad for Noraplan sheeting.

### STEP 3



Remove the residue immediately after scrubbing using a wet / dry vacuum.


### STEP 4



Rinse with clean water using a flat mop and allow the floor to dry.

**REGULAR CLEANING**

**STEP 1**

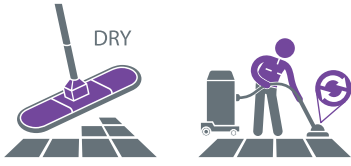

Dust mop with flat mop or vacuum on a daily basis to remove dust and loose dirt.

**STEP 2**



Damp mop with a flat mop or auto-scrub the floor with a red cleaning pad.


**STEP 3**



Dry buff the floor using a rotary machine fitted with a white pad.

**OCCASIONAL CLEANING**

**STEP 1**

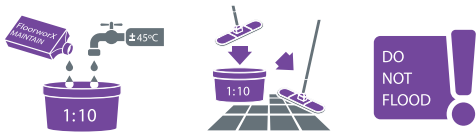

Apply a solution of FloorworX Maintain diluted 1:10 with clean water to the floor using a wet mop and allow to soak for 10 minutes.



ALLOW 10 MINUTES DRYING

**STEP 2**



Scrub the floor with a rotary machine fitted with a red pad.

**STEP 3**



Remove the residue immediately after scrubbing using a wet / dry vacuum.

**STEP 4**



ALLOW DRYING

Rinse with clean water using a flat mop and allow the floor to dry.